


Manual de usuario

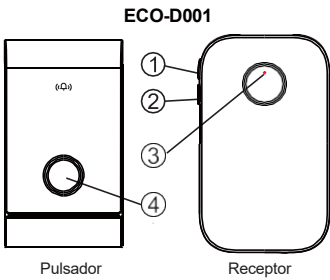

Timbre autoalimentado

- 1- Botón volumen
- 2- Botón emparejamiento/selección melodías
- 3- Luz de estado
- 4- Botón transmisor

1. Parámetros técnicos


Alimentación receptor: 100/240V 50-60Hz
Alimentación pulsador: autoalimentado
Melodías: 38
Distancia: 20 metros interior / 50 metros exterior
Medidas transmisor: 81x46x25mm
Medidas receptor: 85x52x63mm
Frecuencia de trabajo: 433MHz

2. Características

Timbre inalámbrico sin pilas que genera señales inalámbricas al presionarlo para generar electricidad, sin pilas, sin cables, fácil de instalar, ecológico y respetuoso con el medio ambiente. Su aspecto es sencillo, con un diseño de alta calidad que resulta muy atractivo.

3. Operación


- 1. Ajuste de volumen:** Pulse el botón 1 del receptor para cambiar el volumen. Hay 4 ajustes de volumen: alto, medio, bajo y silencioso.
- 2. Seleccionar melodía:** Mantenga pulsado el botón 2 del receptor para comprobar todos los tonos disponibles. Hay 38 opciones de tonos. El último tono reproducido se seleccionará por defecto como su elección.
- 3. Emparejamiento:** Mantenga pulsado el botón 2 del receptor durante 3 segundos en el plazo de 1 minuto después de encender el receptor, y este entrará en modo de emparejamiento cuando se encienda el indicador rojo. A continuación, pulse el transmisor y se emparejará correctamente. (Nota: el transmisor y el receptor están emparejados de forma predeterminada, compruébelo antes de intentar emparejarlos).
- 4. Borrar memoria:** Mantenga pulsado el botón 2 del receptor durante 10 segundos para borrar el emparejamiento (el indicador rojo parpadeará 3 veces y permanecerá encendido hasta que se apague). **Nota:** Si no puede acceder al modo de emparejamiento, inténtelo de nuevo después de cortar la alimentación durante 5 segundos.
- 5. Seleccionar 1ª melodía:** Mantenga pulsado el botón 1 cuando el receptor esté encendido para poder escuchar la primera canción.

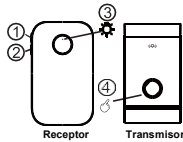

4. Instalación



El transmisor se puede colocar o mover a voluntad, se puede fijar en cualquier lugar que se desee.

- 1. Método 1:**
Instalar con el adhesivo de doble cara (incluido en el paquete).



Consejos: Evite instalarlo en objetos metálicos (puertas de hierro, ventanas de hierro, etc.) para no afectar a la distancia de alcance. Compruebe su funcionalidad antes de instalar el transmisor.


- 2. Método 2:** Instalar con los tornillos (incluidos en el paquete).



FAQ:

- 1) ¿Cuántos receptores se pueden emparejar con un transmisor?
R: Hasta 5 receptores.
- 2) No se puede emparejar con el transmisor.
R: Desconecte la alimentación del receptor y vuelva a conectarlo después de 5 segundos, luego inténtelo de nuevo.
- 3) No hay sonido.
R: Compruebe si el receptor está enchufado y si la toma de corriente está encendida, compruebe si el timbre está en modo silencioso. Compruebe si el transmisor se ha emparejado correctamente con el receptor.
- 4) La distancia de transmisión se acorta o se pierde la conectividad.
R: El transmisor y el receptor están conectados a través de RF 433 MHz. La distancia se ha probado y verificado en el laboratorio, pero puede variar en función de las condiciones de uso real. Intente reducir y eliminar los obstáculos entre el transmisor y el receptor.

User Manual

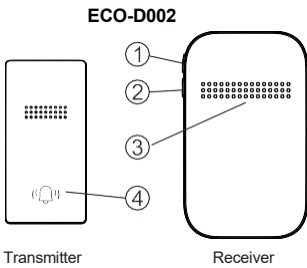

Wireless Kinetic Doorell

- 1 Volume button and back button
- 2 Pairable button and music selection button
- 3 Indicator Light
- 4 Transmitter button

1. Technical Parameter


Power Supply	Self-Powered (Transmitter) AC100~240V, 50/60Hz (Receiver)
Work Frequency	RF 433MHz
Ringtones	38
Sound Volume	4 Adjustable Levels
Colour	White/Black
Distance	20m (Indoor), 50m (Outdoor)
Certification	CE/RoHS/FCC/UKCA
Plug Type	UK/EU/US
Transmitter Dimensions	L67*W33*H19mm
Receiver Dimensions	L85*W52*H43-63mm

2. Product Features

Battery-free wireless doorbell that drives wireless signals by pressing to generate electricity, no battery, no wiring, simple installation, green and environmental protection. The appearance is simple, generous high-grade design which looks quite beautiful.

3. User Instruction

- 1. Volume Selection:** Press button 1 on the receiver to change the volume. There are 4 adjustments for volume: loud, medium, low and silent.
- 2. Chimes Selection:** Keep pressing button 2 on the receiver to check all available chimes. There are 38 options on chimes. The last played chimes will be selected by default as your choice.
- 3. Pairing Method:** Long press button 2 on the receiver for 3 seconds within 1 minute after the receiver is powered on, it enters the pairing mode after the red indicator is on. Then press the transmitter and paired successfully. (Note: Transmitter & Receiver are paired by default, please check once before attempting to pair)
- 4. Clear Pairing:** Long press button 2 on the receiver for 10 seconds to clear the pairing (the red indicator will flash 3 times and on and wait until it turns off).
- Note:** If you can not enter the pairing mode, please try it again after cutting off power for 5 seconds.
- 5. The music back to the first one:** Long press button 1 when the receiver status is powered on, thus can hear the first music.

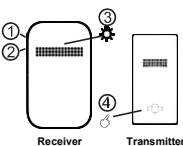

4. Installation


The transmitter can be placed or moved at will, you can fix it anywhere you want.

- 1. Installation Method 1:**
Install with the double-sided adhesive (included in the pack)



Tips: Please avoid installing on metal objects (iron gates, iron windows, etc) to avoid influencing the launch distance. Please make sure it's availability before installing the transmitter.

- 2. Installation Method 2:**
Install with the screws (included in the pack)

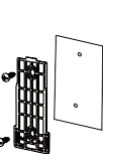

FAQ:

- 1) How many receivers can be paired with one transmitter?
A: Up to 5 receivers.
- 2) Can not pair with the transmitter.
A: Please cut the power of the receiver and connect it after 5 seconds then try it again.
- 3) No sound.
A: Confirm if the receiver is plugged in and the socket is powered on, check if the chime is in a mute state. Confirm if the transmitter paired with the receiver successfully.
- 4) The transmission distance becomes shorter or lose connectivity
A: The transmitter & receiver are connected through RF 433MHz. The distance was tested and verified in the laboratory but may vary depending on situations during the actual use. Please try to reduce and clear the obstacles between the transmitter and receiver.